

USB2-F-5001 – Quick Start Guide

Congratulations on your purchase of the Connective Peripherals USB2-F-5001 USB to RS485 adapter. Getting started is quick and easy:

Detailed device driver installation instructions, port information and mechanical details are available in the USB2-F-5001 datasheet. This can be downloaded from: <u>http://www.connectiveperipherals.com</u>.

- To begin, connect the USB cable to your PC USB Host or a USB Hub connector and the USB2-F-5001. Power is supplied by the USB bus, so no external power supply is required.
- Device drivers are needed for the PC to communicate with the USB2-F-5001. If your computer is connected to the Internet, you can use the Microsoft Windows Update service to automatically download the latest WHQL-certified device drivers. Alternatively these can be downloaded from: <u>http://www.connectiveperipherals.com</u>. To install the drivers , follow the following steps:
 - 1. Download and unzip the drivers to a folder.
 - Connect the USB cable to your PC USB Host or a USB Hub connector and the USB2-F-5001. Power is supplied by the USB bus, so no external power supply is required.
 - 3. The Windows "Found New Hardware Wizard" will appear. Select the choice to install the drivers from a specific location, then browse to the folder just created when the drivers were downloaded from the Connective Peripherals website.
 - 4. If a notice appears indicating that the drivers are not signed, select "Install Anyway".
 - 5. The Driver wizard will appear a second time. Repeat the steps 2 to 4 above to complete the installation.

© Connective Peripherals Pte Ltd

Clearance Number: CP#015 Document Reference Number: CP_000025 USB2-F-5001_Quick_Start_Guide Version 1.2



USB2-F-5001 – Quick Start Guide

• The USB2-F-5001 can provide a +5VDC output at 250mA by Pin9.

The DE-9P pin-out is as follows:

Pin	Function
1	DATA- = Transmit/Receive Data, negative polarity
2	DATA+ = Transmit/Receive Data, positive polarity
3	DATA- (1) = Transmit/Receive Data, negative polarity (with internal 120 ohm termination resistor)
4	N/A
5	GND = signal ground
6	N/A
7	N/A
8	N/A
9	PWR = +5V output

Revision History:

Version 1.0	2009-05-21	Initial release
Version 1.1	2009-09-15	Updated to reduced PWR to 250mA
Version 1.2	2019-03-11	Re-branding to reflect the migration of the product
		from EasySync to Connective Peripherals name
		(changed logo, copyright, internal hyperlinks)

© Connective Peripherals Pte Ltd

Clearance Number: CP#015 Document Reference Number: CP_000025 USB2-F-5001_Quick_Start_Guide Version 1.2