

Type CBW28 Thermal Circuit Breaker Fuseholder Type – Push to Reset



www.optifuse.com (619) 593-5050


Specifications:

- Fuseholder Type Circuit Breaker – Push to Reset
- Voltage: 125/250 VAC, 50/60 Hz. and 32 VDC
- Amperage: 1A, 1.25A, 1.5A, 1.75A, 2A, 2.25A, 2.5A, 3A, 3.5A, 4A, 5A, 6A, 7A, 8A, 9A, 10A, 11A, 12A, 13A, 15A, 16A
- Interrupt Capacity: 1000A @ 250 VAC, 50/60Hz. and 200A @ 32 VDC
- Insulation Resistance: 100M Ω
- Terminals: 0.250" [6.35mm] quick connect – Nickel plated brass.
- Panel Thickness: 0.8 – 2.1mm (0.031 - 0.083 inches)
- Mounting: Snap-In Front Panel Mount (See Recommended Cut Out)

Agency Standards and Listings:



Mechanical Dimensions: Inches [mm]

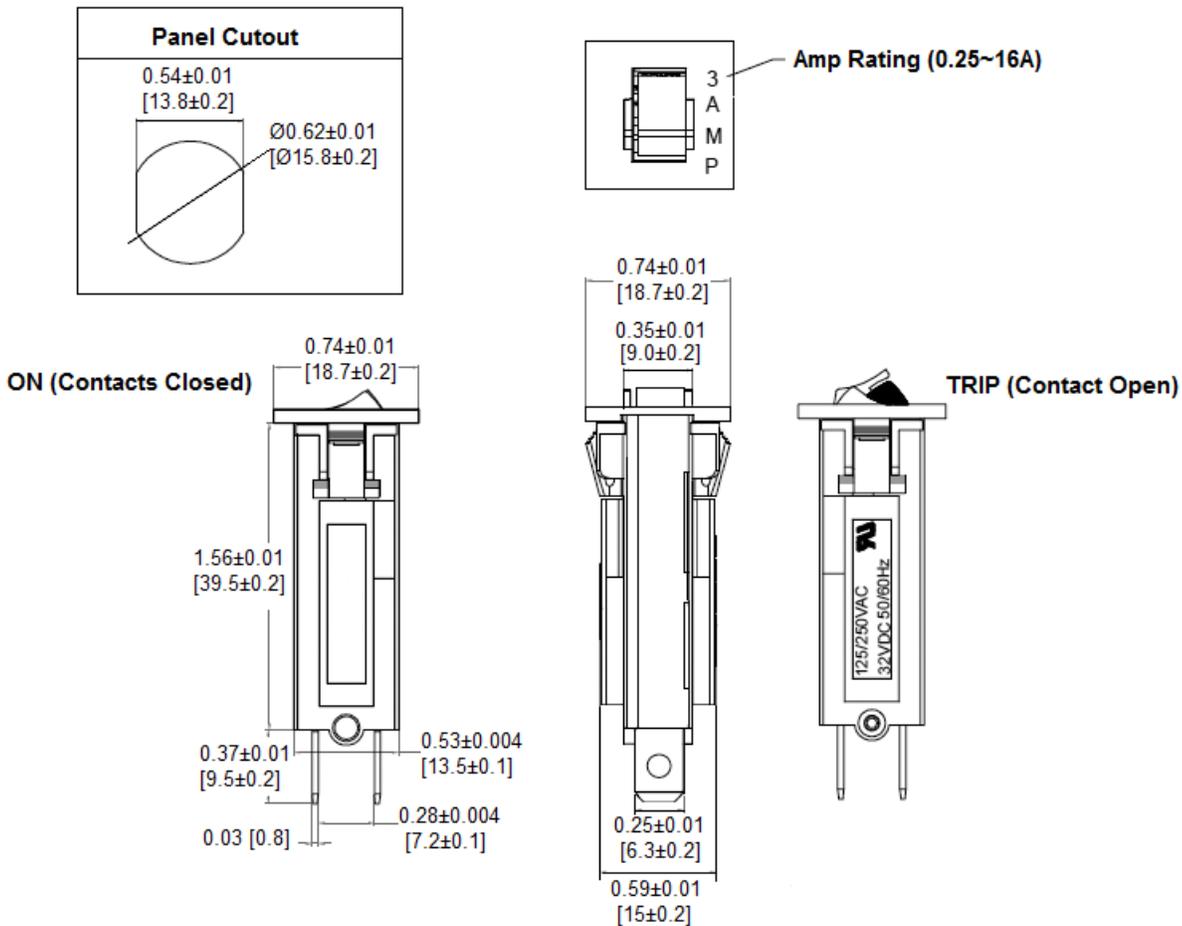

Note: All specifications subject to change without notice.

Type CBW28 Thermal Circuit Breaker Fuseholder Type – Push to Reset



www.optifuse.com (619) 593-5050

Calibration:

Electrical Data @ 25°C


Continuously Carried at 100% of Rated Current

1A-2.5A: May Trip between 101% to 149%

3.0A-16A: May Trip between 101% to 134%


1A-2.5A: Must Trip at 150% of Rated Current within 1 Hour

3.0A-16A: Must Trip at 135% of Rated Current within 1 Hour

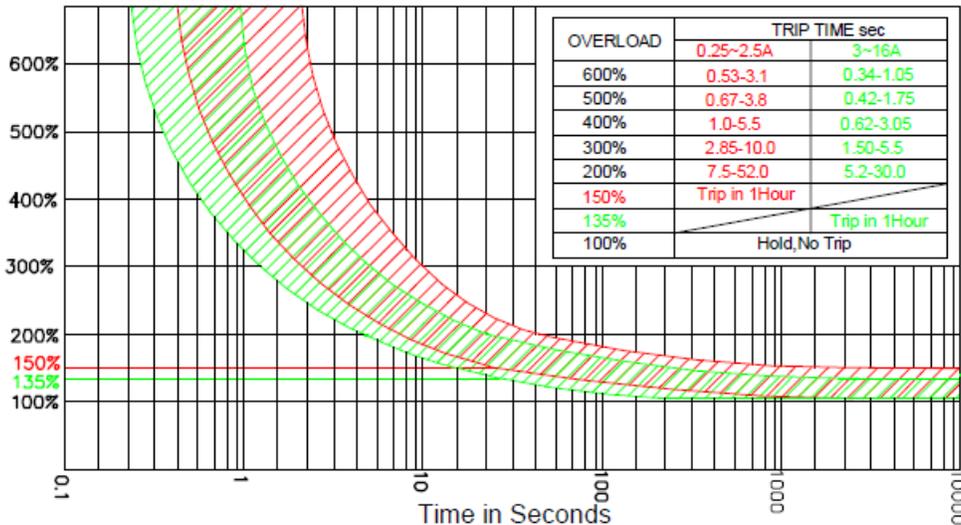

Trip Curves Are Specified of 25° C/77° F

Ambient Compensation Chart

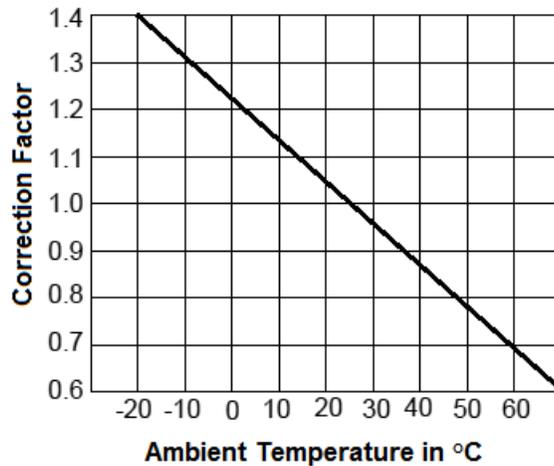

Ambient Temperature Correction Factor:

The time/current characteristic curve depends on the ambient temperature prevailing. In order to eliminate nuisance tripping. Please multiply the current breaker current ratings by the derating factor shown above.

Warning:



- Operation beyond the specified maximum ratings or improper use may result in damage and possible electrical arcing and/or flame.
- Device are intended for occasional overcurrent protection. Application for repeated overcurrent condition and/or prolonged trip are not anticipated.
- Avoid contact of device with chemical solvent. Prolonged contact will damage the device performance.

Note: All specifications subject to change without notice.

Rev F 02/2013 - Page: 2/2
Code K01-01H