

MX BOARD 3.0S

Expect to win – with CHERRY Gaming Performance in innovative aluminum design!



Models may vary from the image shown

The CHERRY MX BOARD 3.0S is a high-performance gaming keyboard with a choice of illumination, color and switch options. The stylish extruded aluminum housing integrates the genuine CHERRY MX switches, designed for fast play with all the gaming features you need to win.

The CHERRY MX gold crosspoint precision switches, made in Germany with full n-key rollover, anti-ghosting and a WIN key lock give you the CHERRY gaming standard you deserve.

Depending on the model, the keyboard features adjustable backlight or impressive RGB illumination in over 16 million colors. Numerous color routines and illumination modes are simple to use with the freely downloadable Utility software. The robust workmanship and technical appearance are manifested in the removable cable with durable, secure connection, round rubber feet for extra stability and an innovative, completely screwless, design. The completely abrasion-resistant key caps are either double-shot molded in plastic or front-lasered, depending on the model choice.

Your keyboard – your style – your victory!

HIGHLIGHTS

- Gaming style - corded keyboard in high-quality extruded aluminum housing
- High-performance gaming keyboard with innovative screwless housing design.
- CHERRY MX technology - Gold Crosspoint precision switches for all keys "Made in Germany"
- Illumination options for different versions range from unlit to monochrome to RGB with color routines in over 16 million colors
- Abrasion-resistant key caps, front lasered or double shot, depending on the model
- Full n-key rollover - all keys are read simultaneously
- Anti-ghosting - no input errors
- WIN key lockout for gaming
- CHERRY button for instant access to Utility software
- Securely connected, detachable cable
- Four round rubber feet for extra stability
-

PRODUCT SPECIFICATIONS

Weight main product:	36 oz
Dimensions product without packaging:	16,93 in x 5,51 in x 1,42 in
Weight of product incl. packaging:	44.69 oz
Dimensions product incl. packaging:	18,11 in x 7,09 in x 1,57 in
Content of master carton (pieces):	8
Weight of master carton incl. content:	0.39 oz
Dimensions master carton:	18.9 in x 14.17 in x 7.87 in
Cable-length:	5.58 ft
Storage temperature:	-4 °F - 140 °F
Working temperature:	32 °F - 122 °F

Product approvals:	<ul style="list-style-type: none"> • BSMI • CE • Windows Hardware Compatibility • FCC • KCC • UKCA • RCM • EU RoHS
System Requirements-Hardware:	USB-A
Operating system:	<ul style="list-style-type: none"> • Windows 7 • Windows 8 • Windows 10 • Windows 11
Scope of delivery:	<ul style="list-style-type: none"> • Keyboard • USB-A to Micro-USB Cable • Short Manual
Reliability:	NA
Software support:	CHERRY Utility Software & Assistant
Service life per key (in million strokes):	100 mio. actuations
Switching characteristics:	standard
Max. current consumption (mA) of keyboard:	500 mA

Keyboard format:	Full-size (100%)
Integrated metal plate:	no
N-key rollover:	N-Key Rollover
Anti-ghosting:	yes
Key encryption:	no
Response time:	1 ms
Internal memory:	no
Palm rest:	Palm rest available as accessory
USB hub:	no
Special key functions:	<ul style="list-style-type: none"> • CHERRY Key • Next track • Last track • Play/Pause • Volume up • Volume down • Unmute/Mute • FN • Calculator • Browser
Adjustable feet:	sold separately
Status LEDs:	in keys
Convenient exchange:	no
Gasket:	no
Warranty:	2 years warranty

Errors, technical changes and delivery options reserved. Technical information refers only to the specification of the products. Properties are not guaranteed.

EAN & Part number	Switches	Color	Illumination	Layout
4025112109430 G80-3870LNAEU-2		black	no	
4025112110177 G80-3870LNLEU-2		black	no	EU (USA+ €-Symbol)
4025112090387 G80-3870LUAEU-2	CHERRY MX BLACK	black	no	EU (USA+ €-Symbol)
4025112090660 G80-3870LUAKR-2	CHERRY MX BLACK	black	no	KR (Korea)
4025112092657 G80-3870LUBTW-2	CHERRY MX BLACK	black	no	TW (Taiwan)
4025112090394 G80-3870LSAEU-2	CHERRY MX BLUE	black	no	EU (USA+ €-Symbol)
4025112090677 G80-3870LSAKR-2	CHERRY MX BLUE	black	no	KR (Korea)
4025112092626 G80-3870LSBTW-2	CHERRY MX BLUE	black	no	TW (Taiwan)
4025112090400 G80-3870LXAEU-2	CHERRY MX BROWN	black	no	EU (USA+ €-Symbol)
4025112090684 G80-3870LXAKR-2	CHERRY MX BROWN	black	no	KR (Korea)
4025112092640 G80-3870LXBTW-2	CHERRY MX BROWN	black	no	TW (Taiwan)
4025112090417 G80-3870LYAEU-2	CHERRY MX RED	black	no	EU (USA+ €-Symbol)
4025112090691 G80-3870LYAKR-2	CHERRY MX RED	black	no	KR (Korea)
4025112092633 G80-3870LYBTW-2	CHERRY MX RED	black	no	TW (Taiwan)
4025112096587 G80-3870LWAEU-2	CHERRY MX SILENT RED	black	no	EU (USA+ €-Symbol)
4025112094026 G80-3870LWAKR-2	CHERRY MX SILENT RED	black	no	KR (Korea)
4025112092879 G80-3874LUAKR-2	CHERRY MX BLACK	black	RGB	KR (Korea)
4025112107429 G80-3874LUBEU-2	CHERRY MX BLACK	black	RGB	EU (USA+ €-Symbol)
4025112092695 G80-3874LUBTW-2	CHERRY MX BLACK	black	RGB	TW (Taiwan)

EAN & Part number	Switches	Color	Illumination	Layout
4025112092909 G80-3874LSAKR-2	CHERRY MX BLUE	black	RGB	KR (Korea)
4025112107436 G80-3874LSBEU-2	CHERRY MX BLUE	black	RGB	EU (USA+ €-Symbol)
4025112092671 G80-3874LSBTW-2	CHERRY MX BLUE	black	RGB	TW (Taiwan)
4025112093876 G80-3874LXADE-2	CHERRY MX BROWN	black	RGB	DE (Germany)
4025112092886 G80-3874LXAKR-2	CHERRY MX BROWN	black	RGB	KR (Korea)
4025112093753 G80-3874LXAPN-2	CHERRY MX BROWN	black	RGB	PN (PanNordic)
4025112099540 G80-3874LXAUS-2	CHERRY MX BROWN	black	RGB	US (USA)
4025112107412 G80-3874LXBEU-2	CHERRY MX BROWN	black	RGB	EU (USA+ €-Symbol)
4025112092688 G80-3874LXBTW-2	CHERRY MX BROWN	black	RGB	TW (Taiwan)
4025112092893 G80-3874LYAKR-2	CHERRY MX RED	black	RGB	KR (Korea)
4025112093746 G80-3874LYAPN-2	CHERRY MX RED	black	RGB	PN (PanNordic)
4025112094545 G80-3874LYAUS-2	CHERRY MX RED	black	RGB	US (USA)
4025112107405 G80-3874LYBEU-2	CHERRY MX RED	black	RGB	EU (USA+ €-Symbol)
4025112092664 G80-3874LYBTW-2	CHERRY MX RED	black	RGB	TW (Taiwan)
4025112093364 G80-3874LWADE-2	CHERRY MX SILENT RED	black	RGB	DE (Germany)
4025112094057 G80-3874LWAKR-2	CHERRY MX SILENT RED	black	RGB	KR (Korea)
4025112094538 G80-3874LWAUS-2	CHERRY MX SILENT RED	black	RGB	US (USA)
4025112107443 G80-3874LWBEU-2	CHERRY MX SILENT RED	black	RGB	EU (USA+ €-Symbol)
4025112094194 G80-3874HUAKR-9	CHERRY MX BLACK	pink	RGB	KR (Korea)

EAN & Part number	Switches	Color	Illumination	Layout
4025112103353 G80-3874HUAUS-9	CHERRY MX BLACK	pink	RGB	US (USA)
4025112107351 G80-3874HUBEU-9	CHERRY MX BLACK	pink	RGB	EU (USA+ €-Symbol)
4025112103148 G80-3874LUADE-9	CHERRY MX BLACK	pink	RGB	DE (Germany)
4025112094200 G80-3874HSAKR-9	CHERRY MX BLUE	pink	RGB	KR (Korea)
4025112103360 G80-3874HSAUS-9	CHERRY MX BLUE	pink	RGB	US (USA)
4025112107368 G80-3874HSBEU-9	CHERRY MX BLUE	pink	RGB	EU (USA+ €-Symbol)
4025112103131 G80-3874LSADE-9	CHERRY MX BLUE	pink	RGB	DE (Germany)
4025112094187 G80-3874HXAKR-9	CHERRY MX BROWN	pink	RGB	KR (Korea)
4025112099137 G80-3874HXATW-9	CHERRY MX BROWN	pink	RGB	TW (Taiwan)
4025112103339 G80-3874HXAUS-9	CHERRY MX BROWN	pink	RGB	US (USA)
4025112107337 G80-3874HXBEU-9	CHERRY MX BROWN	pink	RGB	EU (USA+ €-Symbol)
4025112103162 G80-3874LXADE-9	CHERRY MX BROWN	pink	RGB	DE (Germany)
4025112097775 G80-3874LXAPN-9	CHERRY MX BROWN	pink	RGB	PN (PanNordic)
4025112094170 G80-3874HYAKR-9	CHERRY MX RED	pink	RGB	KR (Korea)
4025112103346 G80-3874HYAUS-9	CHERRY MX RED	pink	RGB	US (USA)
4025112107344 G80-3874HYBEU-9	CHERRY MX RED	pink	RGB	EU (USA+ €-Symbol)
4025112103179 G80-3874LYADE-9	CHERRY MX RED	pink	RGB	DE (Germany)
4025112097768 G80-3874LYAPN-9	CHERRY MX RED	pink	RGB	PN (PanNordic)
4025112095054 G80-3874HWAKR-9	CHERRY MX SILENT RED	pink	RGB	KR (Korea)

EAN & Part number	Switches	Color	Illumination	Layout
4025112097096 G80-3874HWATW-9	CHERRY MX SILENT RED	pink	RGB	TW (Taiwan)
4025112103377 G80-3874HWAUS-9	CHERRY MX SILENT RED	pink	RGB	US (USA)
4025112107375 G80-3874HWBEU-9	CHERRY MX SILENT RED	pink	RGB	EU (USA+ €-Symbol)
4025112103155 G80-3874LWADE-9	CHERRY MX SILENT RED	pink	RGB	DE (Germany)
G80-3874LWAPN-9	CHERRY MX SILENT RED	pink	RGB	PN (PanNordic)
4025112092817 G80-3870HUBTW-0	CHERRY MX BLACK	white	no	TW (Taiwan)
4025112093289 G80-3870LUAEU-0	CHERRY MX BLACK	white	no	EU (USA+ €-Symbol)
4025112093197 G80-3870LUAKR-0	CHERRY MX BLACK	white	no	KR (Korea)
4025112092824 G80-3870HSBTW-0	CHERRY MX BLUE	white	no	TW (Taiwan)
4025112093296 G80-3870LSAEU-0	CHERRY MX BLUE	white	no	EU (USA+ €-Symbol)
4025112093180 G80-3870LSAKR-0	CHERRY MX BLUE	white	no	KR (Korea)
4025112092800 G80-3870HXBTW-0	CHERRY MX BROWN	white	no	TW (Taiwan)
4025112093302 G80-3870LXAEU-0	CHERRY MX BROWN	white	no	EU (USA+ €-Symbol)
4025112093210 G80-3870LXAKR-0	CHERRY MX BROWN	white	no	KR (Korea)
4025112092794 G80-3870HYBTW-0	CHERRY MX RED	white	no	TW (Taiwan)
4025112093272 G80-3870LYAEU-0	CHERRY MX RED	white	no	EU (USA+ €-Symbol)
4025112093203 G80-3870LYAKR-0	CHERRY MX RED	white	no	KR (Korea)
4025112096594 G80-3870LWAEU-0	CHERRY MX SILENT RED	white	no	EU (USA+ €-Symbol)
4025112094033 G80-3870LWAKR-0	CHERRY MX SILENT RED	white	no	KR (Korea)

EAN & Part number	Switches	Color	Illumination	Layout
4025112092060 G80-3874HUAKR-0	CHERRY MX BLACK	white	RGB	KR (Korea)
4025112103308 G80-3874HUAUS-0	CHERRY MX BLACK	white	RGB	US (USA)
4025112107290 G80-3874HUBEU-0	CHERRY MX BLACK	white	RGB	EU (USA+ €-Symbol)
4025112092787 G80-3874HUBTW-0	CHERRY MX BLACK	white	RGB	TW (Taiwan)
4025112103100 G80-3874LUADE-0	CHERRY MX BLACK	white	RGB	DE (Germany)
4025112092039 G80-3874HSAKR-0	CHERRY MX BLUE	white	RGB	KR (Korea)
4025112103315 G80-3874HSAUS-0	CHERRY MX BLUE	white	RGB	US (USA)
4025112107306 G80-3874HSBEU-0	CHERRY MX BLUE	white	RGB	EU (USA+ €-Symbol)
4025112092756 G80-3874HSBTW-0	CHERRY MX BLUE	white	RGB	TW (Taiwan)
4025112103094 G80-3874LSADE-0	CHERRY MX BLUE	white	RGB	DE (Germany)
4025112092053 G80-3874HXAKR-0	CHERRY MX BROWN	white	RGB	KR (Korea)
4025112103322 G80-3874HXAUS-0	CHERRY MX BROWN	white	RGB	US (USA)
4025112107313 G80-3874HXBEU-0	CHERRY MX BROWN	white	RGB	EU (USA+ €-Symbol)
4025112092770 G80-3874HXBTW-0	CHERRY MX BROWN	white	RGB	TW (Taiwan)
4025112103117 G80-3874LXADE-0	CHERRY MX BROWN	white	RGB	DE (Germany)
4025112097799 G80-3874LXAPN-0	CHERRY MX BROWN	white	RGB	PN (PanNordic)
4025112091377 G80-3874HYAEU-0	CHERRY MX RED	white	RGB	EU (USA+ €-Symbol)
4025112092046 G80-3874HYAKR-0	CHERRY MX RED	white	RGB	KR (Korea)
4025112103292 G80-3874HYAUS-0	CHERRY MX RED	white	RGB	US (USA)

EAN & Part number	Switches	Color	Illumination	Layout
4025112092763 G80-3874HYBTW-0	CHERRY MX RED	white	RGB	TW (Taiwan)
4025112103124 G80-3874LYADE-0	CHERRY MX RED	white	RGB	DE (Germany)
4025112097782 G80-3874LYAPN-0	CHERRY MX RED	white	RGB	PN (PanNordic)
4025112094040 G80-3874HWAKR-0	CHERRY MX SILENT RED	white	RGB	KR (Korea)
4025112097089 G80-3874HWATW-0	CHERRY MX SILENT RED	white	RGB	TW (Taiwan)
4025112094521 G80-3874HWAUS-0	CHERRY MX SILENT RED	white	RGB	US (USA)
4025112107320 G80-3874HWBEU-0	CHERRY MX SILENT RED	white	RGB	EU (USA+ €-Symbol)
4025112093371 G80-3874LWADE-0	CHERRY MX SILENT RED	white	RGB	DE (Germany)

Please contact your local CHERRY service and support teams or your CHERRY sales partners for versions available in your country.