


Installation Guide: Replacement Controller Module – Horizontal iPDU's P/N: MA005 & MAG05

The replacement Controller Module is a hot-swappable unit that works with the Panduit SmartZone G5 iPDU series of intelligent power distribution units. It is the “brain” of the PDU that contains the most complicated and sensitive electronic sub-systems. It is designed for safe removal without disrupting power to the outlets.


Note: The replacement Control Modules are designed to connect to a SmartZone G5 iPDU only. Connecting it to another device may result in damage.

INVENTORY

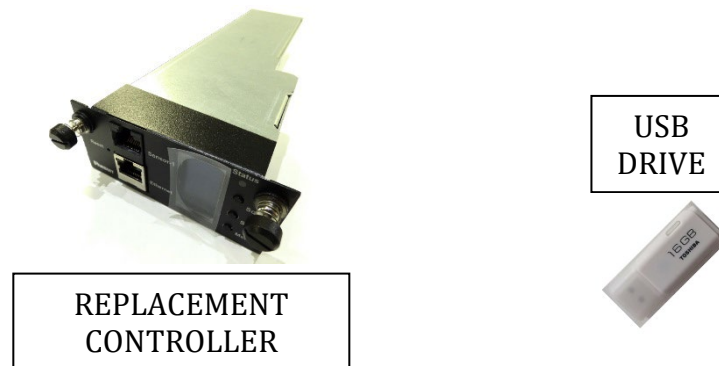


INSTALLATION INSTRUCTIONS

1. Using your thumb and index finger, loosen the (2) screws securing the replacement Control Module in place

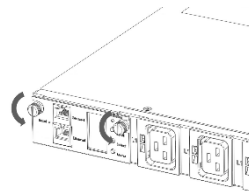


2. Remove the replacement Control Module from the PDU chassis

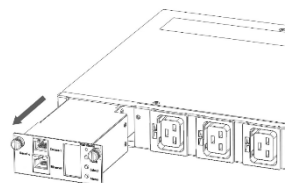


3. Remove all connections from the front of the existing replacement Control module (Ethernet, Serial, Sensor, etc.) and plug them into the front of the replacement Control module

NOTE: It is recommended to disconnect and reconnect ports immediately to insure the cables are plugged into the same ports as before

4. Install the replacement Control Module into the PDU chassis

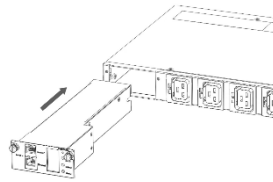

5. Using your thumb and index finger, tighten the (2) screws securing the replacement Control Module in place

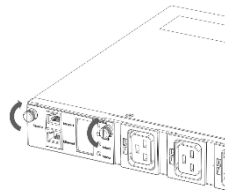

UPDATING THE FIRMWARE:

1. Please visit <http://www.panduit.com/pdu-support> for the most recent firmware version.
2. Options on how to upgrade the firmware can be found in the Panduit G5 iPDU User manual.

The Panduit iPDU Replacement Controller Module is installed, updated, and ready for use. For more information, please go to www.panduit.com