

Installation manual Sunrise & Sunlight evaluation kit





ESD sensitive product. Use ESD protection equipment.









Download software & USB Com Cable Driver:



https://senseair.com/product/ sunrise-sunlight-evaluation-kit/



Sensor connected? Yellow LEDs, Rx/Tx, flashes alternately

IMA8637 Rev 5





Senseair AB (headquarter) www.senseair.com

Senseair