

3/8" M-SNAPS




B9848



3/8" F-SNAPS



B9849

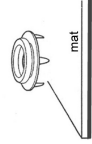

B9867

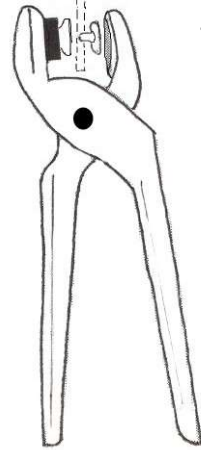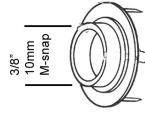

B9880





B9868

6/32 machine screw

3/8" 10mm F-snap

B9868

3/8" 10mm M-snap

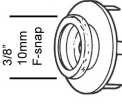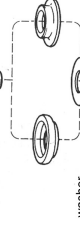

B9868

B9831



B9830




B9831

B9830

Adapter from 3/8" Male stud to 3/8" Female stud

Adapter from 3/8" Female stud to Male stud

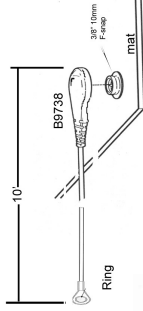

B9738

Ring

3/8" 10mm F-snap

mat

mat

10"

B9880 Ring terminal to banana

B9849 3/8" 10mm female snaps and rivets

B9848 3/8" 10mm male snaps and rivets

B9844 Snap tool

B9867 3/8" 10mm female push and clinch snap

B9868 3/8" 10mm male push and clinch snap

B9865 Universal snap kit with 3/8" male and female snaps

B9738 10' long 3/8" male stud straight wire ground to ring with one meg resistor

B9830 Adapter 3/8" male stud to 3/8" female stud

B9831 Adapter 3/8" female to 3/8" male stud

B9701 10' Floor mat ground with 3/8" male stud



B9841

Alligator clip



B9880

Ring terminal

Snap Installation

- Botron rivets are self-piercing no need to pre-drill.
- Place rivet in bottom of tool
- Place male or female snap on top and position tool over mat and squeeze firmly

BOTRON CO. INC.

325 W. MELINDA LN

PHOENIX AZ 85027

PH# 623-582-6700

FAX# 623-582-6776

www.sales@botron.com

sales@botron.com

SNAP TOLL & HARDWARE FOR GROUNDING