

MATERIALS	
BODY	BRASS GOLD PLATED
CONTACT	GOLD PLATED
INSULATOR	PTFE

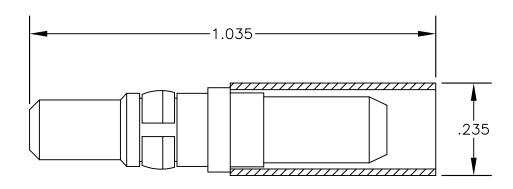

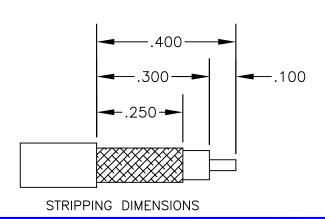

ASSEMBLY PROCEDURES

- 1. SLIDE FERRULE ONTO CABLE STRIP CABLE AS SHOWN & TIN CENTER CONDUCTOR.
- 2. INSERT DIELECTRIC AND CENTER CONDUCTOR INTO BODY. SOLDER CENTER CONDUCTOR THROUGH HOLE IN BODY. REMOVE EXCESS SOLDER. SLIDE FERRULE FORWARD & SOLDER BRAID THROUGH HOLE IN FERRULE.



PASTERNACK ENTERPRISES, INC.

P.O BOX 16759, IRVINE, CA 92623 PHONE (949) 261-1920 FAX (949) 261-7451

WEB ADDRESS: www.pasternack.com E-MAIL ADDRESS: sales@pasternack.com

COAXIAL & FIBER OPTICS

PE4812

 D SUBMINIATURE, STRAIGHT PLUG, SOLDER ATTACHMENT FOR RG58, RG141 & RG303

SIZE A FSCM NO. 53919

CAD FILE 061002

SCALE N/A

127

NOTES:

- 1. UNLESS OTHERWISE SPECIFIED ALL DIMENSIONS ARE NOMINAL.
- 2. ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE AT ANY TIME.