# SIEMENS

### Data sheet

## 3RA2120-4AD26-0AP6



Fuseless motor starter Direct start 600VAC Size S0 11-16Amp 220/240VAC 50/60HZ screw connection For snapping onto 60 mm busbar systems Type of coordination 2 IQ = 150 KA Also full fills type Of coordination 1 1NO+1NC (contactor)

5 <u>5</u> 1	
product brand name	SIRIUS
product designation	non-fused motor starter 3RA2
design of the product	direct starter
manufacturer's article number	
<ul> <li>of the supplied contactor</li> </ul>	<u>3RT2026-1AP60</u>
<ul> <li>of the supplied circuit-breakers</li> </ul>	<u>3RV2021-4AA10</u>
<ul> <li>of the supplied busbar adapter</li> </ul>	8US1251-5NT10
<ul> <li>of the supplied link module</li> </ul>	<u>3RA2921-1AA00</u>
General technical data	
size of the circuit-breaker	SO
size of load feeder	SO
product extension auxiliary switch	Yes
insulation voltage with degree of pollution 3 at AC rated value	690 V
degree of pollution	3
surge voltage resistance rated value	6 kV
shock resistance according to IEC 60068-2-27	6g / 11 ms
mechanical service life (operating cycles) of contactor typical	10 000 000
type of assignment	2
Ambient conditions	
ambient temperature	
<ul> <li>during operation</li> </ul>	-20 +60 °C
during storage	-50 +80 °C
<ul> <li>during transport</li> </ul>	-55 +80 °C
Main circuit	
number of poles for main current circuit	3
design of the switching contact	electromechanical
adjustable current response value current of the current- dependent overload release	11 16 A
operating voltage	
rated value	690 V
<ul> <li>at AC-3 rated value maximum</li> </ul>	690 V
operating frequency rated value	50 60 Hz
operational current at AC-3 at 400 V rated value	15.5 A
operating power at AC-3	
• at 400 V rated value	7 500 W
• at 500 V rated value	7 500 W
Control circuit/ Control	
control supply voltage at AC	
• at 50 Hz rated value	220 V
● at 50 Hz rated value	176 242 V

	040.14
at 60 Hz rated value	240 V
at 60 Hz rated value	192 264 V
apparent holding power of magnet coil at AC	9.4 VA
inductive power factor with the holding power of the coil	0.28
Auxiliary circuit	1
number of NC contacts for auxiliary contacts	1
number of NO contacts for auxiliary contacts	1
Protective and monitoring functions	
trip class	CLASS 10
design of the overload release	thermal (bimetallic)
response value current of instantaneous short-circuit trip unit	208 A
UL/CSA ratings	
full-load current (FLA) for 3-phase AC motor	
• at 480 V rated value	15.2 A
at 600 V rated value	12.2 A
yielded mechanical performance [hp]	
for single-phase AC motor	
— at 110/120 V rated value	1 hp
— at 230 V rated value	2 hp
for 3-phase AC motor     at 200/208 V reted value	2 hn
- at 200/208 V rated value	3 hp
- at 220/230 V rated value	5 hp
- at 460/480 V rated value	10 hp
- at 575/600 V rated value	10 hp
Short-circuit protection	Yes
product function short circuit protection	
design of the short-circuit trip	magnetic
<ul> <li>conditional short-circuit current (lq)</li> <li>at 400 V according to IEC 60947-4-1 rated value</li> </ul>	153 000 A
<ul> <li>at 500 V according to IEC 60947-4-1 rated value</li> <li>at 500 V according to IEC 60947-4-1 rated value</li> </ul>	100 000 A
Installation/mounting/dimensions	
Installation/ mounting/ dimensions	vertical
mounting position	vertical for snapping onto 60 mm busbar systems
mounting position fastening method	vertical for snapping onto 60 mm busbar systems 260 mm
mounting position	for snapping onto 60 mm busbar systems
mounting position fastening method height width	for snapping onto 60 mm busbar systems 260 mm 45 mm
mounting position fastening method height	for snapping onto 60 mm busbar systems 260 mm
mounting position fastening method height width depth	for snapping onto 60 mm busbar systems 260 mm 45 mm
mounting position fastening method height width depth required spacing	for snapping onto 60 mm busbar systems 260 mm 45 mm
mounting position fastening method height width depth required spacing • for grounded parts	for snapping onto 60 mm busbar systems 260 mm 45 mm 155 mm
mounting position fastening method height width depth required spacing • for grounded parts — forwards	for snapping onto 60 mm busbar systems 260 mm 45 mm 155 mm
mounting position         fastening method         height         width         depth         required spacing         • for grounded parts         — forwards         — backwards	for snapping onto 60 mm busbar systems 260 mm 45 mm 155 mm 10 mm 0 mm
mounting position         fastening method         height         width         depth         required spacing         • for grounded parts         — forwards         — backwards         — upwards	for snapping onto 60 mm busbar systems 260 mm 45 mm 155 mm 10 mm 0 mm 30 mm
mounting position         fastening method         height         width         depth         required spacing         • for grounded parts         — forwards         — backwards         — upwards         — at the side	for snapping onto 60 mm busbar systems 260 mm 45 mm 155 mm 10 mm 0 mm 30 mm 9 mm
mounting position         fastening method         height         width         depth         required spacing         • for grounded parts         — forwards         — backwards         — upwards         — at the side         — downwards	for snapping onto 60 mm busbar systems 260 mm 45 mm 155 mm 10 mm 0 mm 30 mm 9 mm
mounting position         fastening method         height         width         depth         required spacing         • for grounded parts         — forwards         — backwards         — upwards         — at the side         — downwards         • for live parts	for snapping onto 60 mm busbar systems 260 mm 45 mm 155 mm 10 mm 0 mm 30 mm 9 mm 10 mm
mounting position         fastening method         height         width         depth         required spacing         • for grounded parts         — forwards         — backwards         — upwards         — at the side         — downwards         • for live parts         — forwards	for snapping onto 60 mm busbar systems 260 mm 45 mm 155 mm 10 mm 0 mm 30 mm 9 mm 10 mm 10 mm
mounting position         fastening method         height         width         depth         required spacing         • for grounded parts         — forwards         — backwards         — upwards         — at the side         — downwards         • for live parts         — forwards         — backwards	for snapping onto 60 mm busbar systems 260 mm 45 mm 155 mm 10 mm 0 mm 30 mm 9 mm 10 mm 10 mm 0 mm
mounting position         fastening method         height         width         depth         required spacing         • for grounded parts         — forwards         — backwards         — upwards         — at the side         — downwards         • for live parts         — forwards         — upwards         — upwards         — upwards         — upwards	for snapping onto 60 mm busbar systems 260 mm 45 mm 155 mm 10 mm 0 mm 30 mm 9 mm 10 mm 10 mm 30 mm 30 mm
mounting position         fastening method         height         width         depth         required spacing         • for grounded parts         — forwards         — backwards         — upwards         — at the side         — downwards         • for live parts         — forwards         — downwards         — forwards         — downwards         — forwards         — downwards         — hackwards         — downwards         — backwards         — downwards         — backwards         — upwards         — downwards	for snapping onto 60 mm busbar systems 260 mm 45 mm 155 mm 10 mm 0 mm 30 mm 9 mm 10 mm 10 mm 10 mm 10 mm 10 mm 10 mm
mounting position         fastening method         height         width         depth         required spacing         • for grounded parts         — forwards         — backwards         — upwards         — at the side         — downwards         • for live parts         — forwards         — downwards         — forwards         — at the side         — downwards         — forwards         — at the side         — at the side         — at the side         — at the side         — upwards         — at the side	for snapping onto 60 mm busbar systems 260 mm 45 mm 155 mm 10 mm 0 mm 30 mm 9 mm 10 mm 10 mm 10 mm 10 mm 10 mm 10 mm
mounting position         fastening method         height         width         depth         required spacing         • for grounded parts         — forwards         — backwards         — upwards         — at the side         — downwards         • for live parts         — forwards         — downwards         • for live parts         — forwards         — at the side         — downwards         — at the side         — upwards         — at the side         — cownwards         — at the side         — downwards         — at the side         Connections/ Terminals	for snapping onto 60 mm busbar systems 260 mm 45 mm 155 mm 10 mm 0 mm 30 mm 9 mm 10 mm 10 mm 0 mm 30 mm 9 mm 10 mm 9 mm 30 mm 9 mm
mounting position         fastening method         height         width         depth         required spacing         • for grounded parts         — forwards         — backwards         — upwards         — at the side         — downwards         • for live parts         — forwards         — backwards         — upwards         — forwards         — downwards         • for live parts         — forwards         — at the side         — downwards         — at the side         — downwards         — at the side         Connections/ Terminals         type of electrical connection for main current circuit         type of connectable conductor cross-sections for main contacts	for snapping onto 60 mm busbar systems 260 mm 45 mm 155 mm 10 mm 0 mm 30 mm 9 mm 10 mm 10 mm 0 mm 30 mm 10 mm 9 mm 30 mm 10 mm 9 mm 30 mm 10 mm
mounting position         fastening method         height         width         depth         required spacing         • for grounded parts         — forwards         — backwards         — upwards         — at the side         — downwards         • for live parts         — forwards         — backwards         — upwards         — forwards         — downwards         — at the side         — downwards         — backwards         — upwards         — downwards         — at the side         Connections/ Terminals         type of electrical connection for main current circuit         type of connectable conductor cross-sections for main contacts finely	for snapping onto 60 mm busbar systems 260 mm 45 mm 155 mm 10 mm 0 mm 30 mm 9 mm 10 mm 10 mm 0 mm 30 mm 10 mm 9 mm 10 mm 30 mm 10 mm 30 mm 10 mm 2x (2.5 6 mm <sup>2</sup> )
mounting position         fastening method         height         width         depth         required spacing         • for grounded parts         — forwards         — backwards         — upwards         — at the side         — downwards         • for live parts         — forwards         — backwards         — upwards         — forwards         — at the side         — downwards         — forwards         — backwards         — upwards         — downwards         — the side         Connections/ Terminals         type of electrical connection for main current circuit         type of connectable conductor cross-sections for main contacts finely stranded with core end processing	for snapping onto 60 mm busbar systems 260 mm 45 mm 155 mm 10 mm 0 mm 30 mm 9 mm 10 mm 10 mm 0 mm 30 mm 10 mm 9 mm 10 mm 30 mm 10 mm 2 mm 30 mm 10 mm 30 mm 10 mm 2 mm 30 mm 10 mm 2 mm 30 mm 10 mm 30 mm 10 mm 2 mm 30 mm 10 mm 30
mounting position         fastening method         height         width         depth         required spacing         • for grounded parts         — forwards         — backwards         — upwards         — at the side         — downwards         • for live parts         — forwards         — downwards         • for live parts         — forwards         — downwards         • for live parts         — forwards         — downwards         — backwards         — upwards         — downwards         — the side         Connections/ Terminals         type of electrical connection for main current circuit         type of connectable conductor cross-sections for main contacts stranded         connectable conductor cross-section for main contacts finely stranded with core end processing         Safety related data	for snapping onto 60 mm busbar systems 260 mm 45 mm 155 mm 10 mm 0 mm 30 mm 9 mm 10 mm 10 mm 10 mm 0 mm 30 mm 10 mm 9 mm 10 mm 30 mm 10 mm <sup>2</sup> , 2x (2.5 6 mm <sup>2</sup> ) 1 6 mm <sup>2</sup>
mounting position         fastening method         height         width         depth         required spacing         • for grounded parts         — forwards         — backwards         — upwards         — at the side         — downwards         • for live parts         — forwards         — backwards         — upwards         — at the side         — downwards         • for live parts         — forwards         — backwards         — upwards         — backwards         — upwards         — oonnwards         — other side         Connections/ Terminals         type of electrical connection for main current circuit         type of connectable conductor cross-sections for main contacts stranded         connectable conductor cross-section for main contacts finely stranded with core end processing         Safety related data         B10 value with high demand rate according to SN 31920         proportion of dangerous failures with high demand rate	for snapping onto 60 mm busbar systems 260 mm 45 mm 155 mm 10 mm 0 mm 30 mm 9 mm 10 mm 10 mm 10 mm 0 mm 30 mm 10 mm 9 mm 10 mm

Certificates/ approvals						
General Product App	roval		For use in hazard- ous locations	Declaration of Conform	nity	
<u>Confirmation</u>		EAC	K ATEX	CE EG-Konf.	UK CA	
Test Certificates		Marine / Shipping				
<u>Type Test Certific-</u> ates/Test Report	Special Test Certific- ate	ABS	BUREAU VERITAS	Lloyd's Register us	PRS	
Marine / Shipping			other	Railway		
RINA	RMRS R	DNV-GL	<u>Confirmation</u>	Vibration and Shock		

#### Further information

Siemens has decided to exit the Russian market (see here).

https://press.siemens.com/global/en/pressrelease/siemens-wind-down-russian-business

Siemens is working on the renewal of the current EAC certificates.

Please contact your local Siemens office on the status of validity of the EAC certification if you intend to import or offer to supply these products to an EAC relevant market (other than the sanctioned EAEU member states Russia or Belarus).

Information on the packaging

https://support.industry.siemens.com/cs/ww/en/view/109813875

Information- and Downloadcenter (Catalogs, Brochures,...)

https://www.siemens.com/ic10 Industry Mall (Online ordering system)

https://mall.industry.siemens.com/mall/en/en/Catalog/product?mlfb=3RA2120-4AD26-0AP6

Cax online generator

http://support.automation.siemens.com/WW/CAXorder/default.aspx?lang=en&mlfb=3RA2120-4AD26-0AP6

Service&Support (Manuals, Certificates, Characteristics, FAQs,...)

https://support.industry.siemens.com/cs/ww/en/ps/3RA2120-4AD26-0AP6

Image database (product images, 2D dimension drawings, 3D models, device circuit diagrams, EPLAN macros, ...)


http://www.automation.siemens.com/bilddb/cax\_de.aspx?mlfb=3RA2120-4AD26-0AP6&lang=en


Characteristic: Tripping characteristics, I<sup>2</sup>t, Let-through current

https://support.industry.siemens.com/cs/ww/en/ps/3RA2120-4AD26-0AP6/char

Further characteristics (e.g. electrical endurance, switching frequency)

http://www.automation.siemens.com/bilddb/index.aspx?view=Search&mlfb=3RA2120-4AD26-0AP6&objecttype=14&gridview=view1

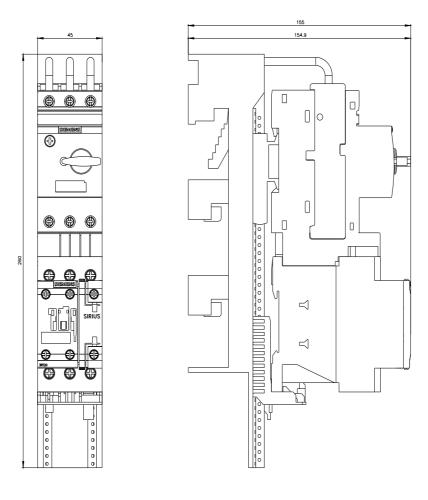

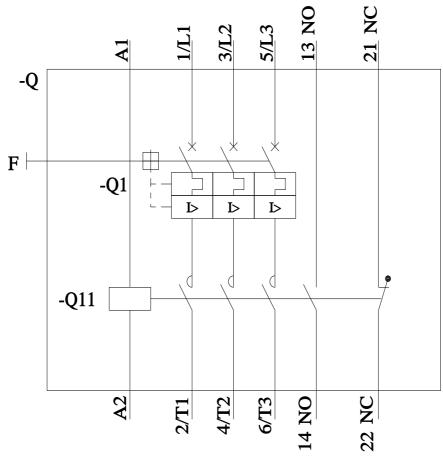

#### last modified:

12/15/2020 🖸

Subject to change without notice © Copyright Siemens