3RA2210-0FA15-2BB4

Data sheet



Load feeder fuseless, Reversing duty 400 V AC, Size S00 0.35...0.50 A 24 V DC screw terminal for installation on standard mounting rail (also fulfills type of coordination 1) Type of coordination 2, Iq = 150 kA 1 NC (contactor)

| product brand name | SIRIUS |
|---|-------------------------------------|
| product designation | Reversing starter |
| design of the product | for standard rail or screw mounting |
| product type designation | 3RA22 |
| manufacturer's article number | |
| of the supplied contactor | 3RT2015-1BB42 |
| of the supplied circuit-breakers | 3RV2011-0FA10 |
| of the supplied link module | 3RA1921-1DA00 |
| General technical data | |
| size of the circuit-breaker | S00 |
| size of load feeder | S00 |
| power loss [W] for rated value of the current | |
| at AC in hot operating state per pole | 2 W |
| without load current share typical | 4 W |
| insulation voltage with degree of pollution 3 at AC rated value | 690 V |
| surge voltage resistance rated value | 6 kV |
| degree of protection NEMA rating | other |
| shock resistance according to IEC 60068-2-27 | 6g / 11 ms |
| mechanical service life (operating cycles) of contactor typical | 30 000 000 |
| type of assignment | 2 |
| type of protection according to ATEX directive 2014/34/EU | Ex II (2) GD |
| certificate of suitability according to ATEX directive 2014/34/EU | DMT 02 ATEX F 001 |
| reference code according to IEC 81346-2:2019 | Q |
| Substance Prohibitance (Date) | 10/01/2009 |
| Ambient conditions | |
| ambient temperature | |
| during operation | -20 +60 °C |
| during storage | -50 +80 °C |
| during transport | -50 +80 °C |
| temperature compensation | -20 +60 °C |
| relative humidity during operation | 10 95 % |
| Main circuit | |
| number of poles for main current circuit | 3 |
| design of the switching contact | electromechanical |
| adjustable current response value current of the current- dependent overload release | 0.35 0.5 A |
| operating voltage | |
| rated value | 690 V |
| • at AC-3 rated value maximum | 690 V |
| • at AC-3e rated value maximum | 690 V |

| operating frequency rated value | 50 60 Hz |
|--|--|
| operating frequency rated value | 50 60 Hz |
| operational current | 0.5.4 |
| • at AC-3 at 400 V rated value | 0.5 A |
| at AC-3e at 400 V rated value | 0.5 A |
| operating power | |
| • at AC-3 | |
| — at 400 V rated value | 120 W |
| • at AC-3e | |
| — at 400 V rated value | 120 kW |
| Control circuit/ Control | |
| type of voltage of the control supply voltage | DC |
| control supply voltage at DC | |
| rated value | 24 V |
| rated value | 24 24 V |
| holding power of magnet coil at DC | 4 W |
| Auxiliary circuit | |
| product extension auxiliary switch | Yes |
| Protective and monitoring functions | |
| trip class | CLASS 10 |
| design of the overload release | thermal (bimetallic) |
| response value current of instantaneous short-circuit trip unit | 6.5 A |
| UL/CSA ratings | |
| full-load current (FLA) for 3-phase AC motor | |
| at 480 V rated value | 0.5 A |
| at 600 V rated value | 0.5 A |
| Short-circuit protection | |
| product function short circuit protection | Yes |
| design of the short-circuit trip | magnetic |
| conditional short-circuit current (Iq) | |
| • at 400 V according to IEC 60947-4-1 rated value | 150 000 A |
| | 100 00071 |
| Installation/ mounting/ dimensions | |
| Installation/ mounting/ dimensions mounting position | vertical |
| mounting position | vertical screw and snap-on mounting onto 35 mm DIN rail |
| mounting position fastening method | screw and snap-on mounting onto 35 mm DIN rail |
| mounting position fastening method height | screw and snap-on mounting onto 35 mm DIN rail 170 mm |
| mounting position fastening method height width | screw and snap-on mounting onto 35 mm DIN rail 170 mm 90 mm |
| mounting position fastening method height width depth | screw and snap-on mounting onto 35 mm DIN rail 170 mm |
| mounting position fastening method height width depth required spacing | screw and snap-on mounting onto 35 mm DIN rail 170 mm 90 mm |
| mounting position fastening method height width depth required spacing • for grounded parts | screw and snap-on mounting onto 35 mm DIN rail 170 mm 90 mm 97 mm |
| mounting position fastening method height width depth required spacing • for grounded parts — forwards | screw and snap-on mounting onto 35 mm DIN rail 170 mm 90 mm 97 mm |
| mounting position fastening method height width depth required spacing • for grounded parts — forwards — backwards | screw and snap-on mounting onto 35 mm DIN rail 170 mm 90 mm 97 mm 32 mm 0 mm |
| mounting position fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards | screw and snap-on mounting onto 35 mm DIN rail 170 mm 90 mm 97 mm 32 mm 0 mm 50 mm |
| mounting position fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side | screw and snap-on mounting onto 35 mm DIN rail 170 mm 90 mm 97 mm 32 mm 0 mm 50 mm 10 mm |
| mounting position fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side — downwards | screw and snap-on mounting onto 35 mm DIN rail 170 mm 90 mm 97 mm 32 mm 0 mm 50 mm |
| mounting position fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts | screw and snap-on mounting onto 35 mm DIN rail 170 mm 90 mm 97 mm 32 mm 0 mm 50 mm 10 mm |
| mounting position fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards | screw and snap-on mounting onto 35 mm DIN rail 170 mm 90 mm 97 mm 32 mm 0 mm 50 mm 10 mm 10 mm |
| mounting position fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards | screw and snap-on mounting onto 35 mm DIN rail 170 mm 90 mm 97 mm 32 mm 0 mm 10 mm 10 mm 32 mm 0 mm |
| mounting position fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — upwards - upwards | screw and snap-on mounting onto 35 mm DIN rail 170 mm 90 mm 97 mm 32 mm 0 mm 50 mm 10 mm 10 mm 0 mm 50 mm |
| mounting position fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — upwards — downwards • for lowereds — torwards — backwards — backwards — backwards — backwards — backwards — backwards — upwards — downwards | screw and snap-on mounting onto 35 mm DIN rail 170 mm 90 mm 97 mm 32 mm 0 mm 50 mm 10 mm 10 mm 50 mm 10 mm |
| mounting position fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — at the side — downwards • at the side — downwards — hackwards — at the side — at the side — at the side — at the side | screw and snap-on mounting onto 35 mm DIN rail 170 mm 90 mm 97 mm 32 mm 0 mm 50 mm 10 mm 10 mm 0 mm 50 mm |
| mounting position fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — at the side — downwards • at the side — downwards — forwards — forwards — backwards — upwards — at the side — downwards — at the side | screw and snap-on mounting onto 35 mm DIN rail 170 mm 90 mm 97 mm 32 mm 0 mm 50 mm 10 mm 10 mm 50 mm 10 mm |
| mounting position fastening method height width depth required spacing | screw and snap-on mounting onto 35 mm DIN rail 170 mm 90 mm 97 mm 32 mm 0 mm 50 mm 10 mm 10 mm 50 mm 10 mm 10 mm 10 mm |
| mounting position fastening method height width depth required spacing | screw and snap-on mounting onto 35 mm DIN rail 170 mm 90 mm 97 mm 32 mm 0 mm 50 mm 10 mm 10 mm 10 mm 50 mm 50 mm 10 mm |
| mounting position fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — upwards — backwards — upwards — townwards — at the side Connections/ Terminals type of electrical connection • for main current circuit • for auxiliary and control circuit | screw and snap-on mounting onto 35 mm DIN rail 170 mm 90 mm 97 mm 32 mm 0 mm 50 mm 10 mm 10 mm 50 mm 10 mm 10 mm 10 mm |
| mounting position fastening method height width depth required spacing | screw and snap-on mounting onto 35 mm DIN rail 170 mm 90 mm 97 mm 32 mm 0 mm 50 mm 10 mm 10 mm 10 mm 50 mm 50 mm 10 mm |
| mounting position fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — upwards — backwards — upwards — townwards — at the side Connections/ Terminals type of electrical connection • for main current circuit • for auxiliary and control circuit | screw and snap-on mounting onto 35 mm DIN rail 170 mm 90 mm 97 mm 32 mm 0 mm 50 mm 10 mm 10 mm 10 mm 50 mm 50 mm 10 mm |
| mounting position fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — upwards — backwards — upwards — the side Connections/ Terminals type of electrical connection • for main current circuit • for auxiliary and control circuit Safety related data | screw and snap-on mounting onto 35 mm DIN rail 170 mm 90 mm 97 mm 32 mm 0 mm 50 mm 10 mm 32 mm 0 mm 50 mm 10 mm screw-type terminals screw-type terminals |
| mounting position fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — upwards — at the side — downwards — to rowards — backwards — upwards — backwards — upwards — at the side Connections/ Terminals type of electrical connection • for main current circuit • for auxiliary and control circuit Safety related data B10 value with high demand rate according to SN 31920 | screw and snap-on mounting onto 35 mm DIN rail 170 mm 90 mm 97 mm 32 mm 0 mm 50 mm 10 mm 32 mm 0 mm 50 mm 10 mm screw-type terminals screw-type terminals |
| mounting position fastening method height width depth required spacing | screw and snap-on mounting onto 35 mm DIN rail 170 mm 90 mm 97 mm 32 mm 0 mm 50 mm 10 mm 32 mm 0 mm 50 mm 10 mm 50 mm 10 mm 50 mm 10 mm 50 mm 10 mm |
| mounting position fastening method height width depth required spacing | screw and snap-on mounting onto 35 mm DIN rail 170 mm 90 mm 97 mm 32 mm 0 mm 50 mm 10 mm 10 mm 50 mm 10 mm 50 mm 10 mm 50 mm 10 mm 10 mm 10 mm 10 mm |
| mounting position fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — upwards — at the side Connections/ Terminals type of electrical connection • for main current circuit • for auxiliary and control circuit Safety related data B10 value with high demand rate according to SN 31920 proportion of dangerous failures • with high demand rate according to IEC 60529 | screw and snap-on mounting onto 35 mm DIN rail 170 mm 90 mm 97 mm 32 mm 0 mm 50 mm 10 mm 10 mm 50 mm 10 mm 50 mm 10 mm 50 mm 10 mm 10 mm 10 mm 10 mm |

● PROFINET IO protocol

● PROFIsafe protocol

Protocol is supported AS-Interface protocol

No

Certificates/ approvals

General Product Approval

For use in hazardous locations

Declaration of Conformity

Confirmation











Test Certificates

Marine / Shipping

Special Test Certificate

Type Test Certificates/Test Report









Marine / Shipping

other Railway

Dangerous Good







Confirmation

Vibration and Shock

Transport Information

Further information

Siemens has decided to exit the Russian market (see here).

https://press.siemens.com/global/en/pressrelease/siemens-wind-down-russian-business

Siemens is working on the renewal of the current EAC certificates.

Please contact your local Siemens office on the status of validity of the EAC certification if you intend to import or offer to supply these products to an EAC relevant market (other than the sanctioned EAEU member states Russia or Belarus).

Information on the packaging

https://support.industry.siemens.com/cs/ww/en/view/109813875

Information- and Downloadcenter (Catalogs, Brochures,...)

https://www.siemens.com/ic10

Industry Mall (Online ordering system)

https://mall.industry.siemens.com/mall/en/en/Catalog/product?mlfb=3RA2210-0FA15-2BB4

Cax online generator

http://support.automation.siemens.com/WW/CAXorder/default.aspx?lang=en&mlfb=3RA2210-0FA15-2BB4

Service&Support (Manuals, Certificates, Characteristics, FAQs,...)

https://support.industry.siemens.com/cs/ww/en/ps/3RA2210-0FA15-2BB4

Image database (product images, 2D dimension drawings, 3D models, device circuit diagrams, EPLAN macros, ...)


http://www.automation.siemens.com/bilddb/cax_de.aspx?mlfb=3RA2210-0FA15-2BB4&lang=en


Characteristic: Tripping characteristics, I2t, Let-through current


https://support.industry.siemens.com/cs/ww/en/ps/3RA2210-0FA15-2BB4/char


Further characteristics (e.g. electrical endurance, switching frequency)

http://www.automation.siemens.com/bilddb/index.aspx?view=Search&mlfb=3RA2210-0FA15-2BB4&objecttype=14&gridview=view1

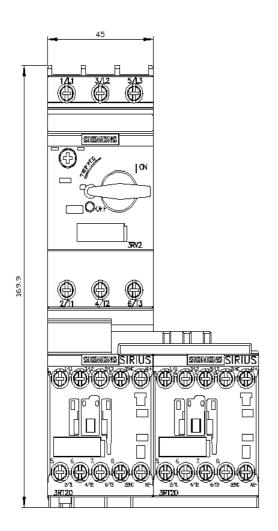

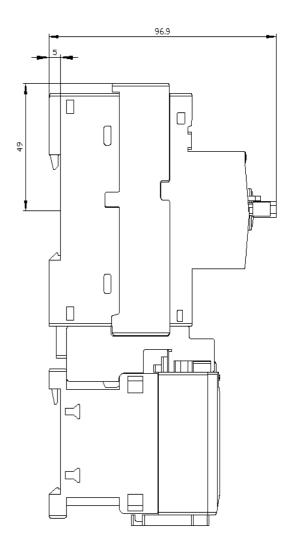

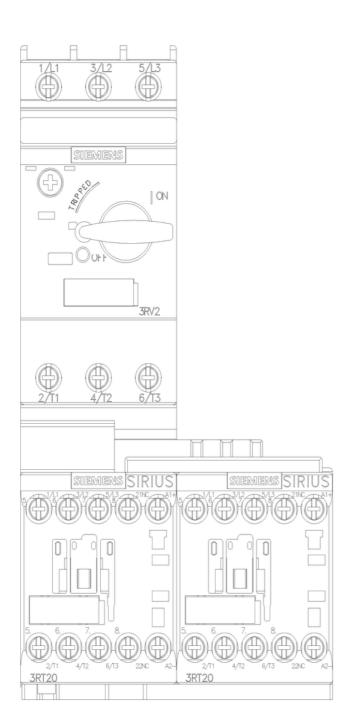

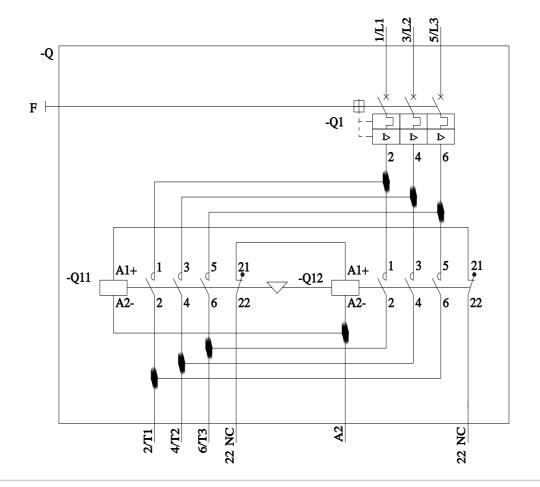

last modified: 4/18/2023 🖸