FlexSQUARE / LED EVS Beacon 853 LED EVS Beacon BWM 115-230VAC YE



Part No.: 853.320.60



MECHANICAL DATA

MECHANICAL DATA		
Length	85 mm	
Width	85 mm	
Height	72 mm	
Materials	PC PP-GF	
Dome colour	Yellow	
Housing colour	Black	
Protection category	IP66 IP67	
Connection	Screw terminals	
cross-sectional area maximum	1,50mm² / 16AWG	
Cable entry	Membrane grommet	
Cable entry minimum	d = 1 mm d = 6 mm	
Cable entry maximum	d = 12 mm d = 9 mm	
Type of fixing	Base mounting Wall mounting	
Working temperature minimum	-25°C	
Working temperature maximum	+50°C	
Weight with packaging	188 g	
Product weight	157 g	
ELECTRICAL DATA		
Operating voltage	115-230V	
Operating voltage type	AC	
Operating voltage frequency	50Hz at 230V 60Hz at 115V	
Operating voltage tolerance	+/- 10%	
Rated operational voltage	230 VAC	
Rated operational current	160 mA	
Rated inrush current	7.000 mA	
Protection class	Protection class 2	
Pollution degree	3	
Overvoltage category	II	
Isolation voltage	Ui = 250V; Uimp = 2.500V	
OPTICAL DATA		
Light source	LED	
Light colour	Yellow	

For additional installation and mounting information, refer to the appropriate user guide at www.werma.com. This printed copy is for information only and is subject to alteration.


FlexSQUARE / LED EVS Beacon 853 LED EVS Beacon BWM 115-230VAC YE

Optical signal image	EVS
Service life optical	50,000 h maximum
APPROVAL DATA	
Conforms with CE	Yes
Conforms with RoHS directive	Yes
WEEE	Yes
Conforms with ATEX-directive	No
Conforms with CCC	Yes
Conforms with UL	No
Conforms with FCC	No
Conforms with IC	No
EAC certificate available	Yes
Conforms with UKCA (Importer)	Yes (WERMA (UK) Ltd.)
Conforms with AS-I	No
ICAO Certification	No
Conforms with DNV	No
Conforms with RoHS CN	No
Conforms with VdS	No

Pror additional installation and mounting information, refer to the appropriate user guide at www.werma.com. This printed copy is for information only and is subject to alteration.

!

FlexSQUARE / LED EVS Beacon 853 LED EVS Beacon BWM 115-230VAC YE

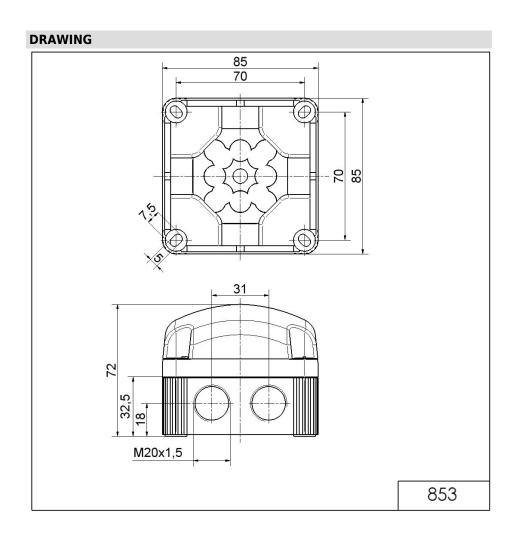

For additional installation and mounting information, refer to the appropriate user guide at www.werma.com. This printed copy is for information only and is subject to alteration.