## 3RA2220-1ED23-0AP6

**Data sheet** 



Fuseless motor starter Reversing operation 600VAC Size S0 2.8-4A 220/240VAC 50/60HZ screw connection For snapping onto 60 mm busbar systems Type of coordination 2 IQ = 150 KA Also full fills type Of coordination 1 1NO+1NC (per contactor)

SIRIUS
non-fused motor starter 3RA2
reversing starter
3RT2023-1AP60
3RV2011-1EA10
3RA2923-1DB1
<u>8US1251-5NT10</u>
3RA2921-1AA00
S00
S0
Yes
690 V
3
6 kV
6g / 11 ms
10 000 000
2
03/01/2017
-20 +60 °C
-50 +80 °C
-55 +80 °C
3
electromechanical
2.8 4 A
690 V
690 V
50 60 Hz
3.6 A
1 500 W
1 500 W 2 200 W

at 50 Hz rated value	220 V
at 50 Hz rated value	176 242 V
<ul> <li>at 60 Hz rated value</li> </ul>	240 V
at 60 Hz rated value	192 264 V
apparent holding power of magnet coil at AC	7.2 VA
inductive power factor with the holding power of the coil	0.28
Auxiliary circuit	
number of NC contacts for auxiliary contacts	2
number of NO contacts for auxiliary contacts	2
Protective and monitoring functions	
trip class	CLASS 10
design of the overload release	thermal (bimetallic)
response value current of instantaneous short-circuit trip unit	52 A
UL/CSA ratings	
full-load current (FLA) for 3-phase AC motor	
at 480 V rated value	3.95 A
at 600 V rated value	4 A
yielded mechanical performance [hp]	
• for single-phase AC motor	
— at 110/120 V rated value	0.13 hp
— at 230 V rated value	0.33 hp
• for 3-phase AC motor	
— at 200/208 V rated value	0.75 hp
— at 220/230 V rated value	0.75 hp
— at 460/480 V rated value	2 hp
— at 575/600 V rated value	3 hp
Short-circuit protection	
product function short circuit protection	Yes
design of the short-circuit trip	magnetic
conditional short-circuit current (Iq)	magnetic
conditional short-circuit current (iq)	
at 400 V according to IEC 60047 4.1 rated value	153 000 A
at 400 V according to IEC 60947-4-1 rated value  Installation/ mounting/ dimensions	153 000 A
Installation/ mounting/ dimensions	
Installation/ mounting/ dimensions mounting position	vertical
Installation/ mounting/ dimensions mounting position fastening method	vertical for snapping onto 60 mm busbar systems
Installation/ mounting/ dimensions mounting position fastening method height	vertical for snapping onto 60 mm busbar systems 260 mm
Installation/ mounting/ dimensions mounting position fastening method height width	vertical for snapping onto 60 mm busbar systems 260 mm 90 mm
Installation/ mounting/ dimensions mounting position fastening method height width depth	vertical for snapping onto 60 mm busbar systems 260 mm
Installation/ mounting/ dimensions mounting position fastening method height width depth required spacing	vertical for snapping onto 60 mm busbar systems 260 mm 90 mm
Installation/ mounting/ dimensions mounting position fastening method height width depth required spacing • for grounded parts	vertical for snapping onto 60 mm busbar systems 260 mm 90 mm 155 mm
Installation/ mounting/ dimensions mounting position fastening method height width depth required spacing • for grounded parts — forwards	vertical for snapping onto 60 mm busbar systems 260 mm 90 mm 155 mm
Installation/ mounting/ dimensions  mounting position  fastening method  height  width  depth  required spacing  • for grounded parts  — forwards  — backwards	vertical for snapping onto 60 mm busbar systems 260 mm 90 mm 155 mm
Installation/ mounting/ dimensions  mounting position  fastening method  height  width  depth  required spacing  • for grounded parts  — forwards  — backwards  — upwards	vertical for snapping onto 60 mm busbar systems 260 mm 90 mm 155 mm  10 mm 0 mm 30 mm
Installation/ mounting/ dimensions  mounting position  fastening method  height  width  depth  required spacing  • for grounded parts  — forwards  — backwards  — upwards  — at the side	vertical for snapping onto 60 mm busbar systems 260 mm 90 mm 155 mm  10 mm 0 mm 30 mm 9 mm
Installation/ mounting/ dimensions  mounting position  fastening method  height  width  depth  required spacing  • for grounded parts  — forwards  — backwards  — upwards  — at the side  — downwards	vertical for snapping onto 60 mm busbar systems 260 mm 90 mm 155 mm  10 mm 0 mm 30 mm
Installation/ mounting/ dimensions  mounting position  fastening method  height  width  depth  required spacing  • for grounded parts  — forwards  — backwards  — upwards  — at the side  — downwards  • for live parts	vertical for snapping onto 60 mm busbar systems 260 mm 90 mm 155 mm  10 mm 0 mm 30 mm 9 mm 10 mm
Installation/ mounting/ dimensions  mounting position  fastening method  height  width  depth  required spacing  • for grounded parts  — forwards  — backwards  — upwards  — at the side  — downwards  • for live parts  — forwards	vertical for snapping onto 60 mm busbar systems 260 mm 90 mm 155 mm  10 mm 0 mm 30 mm 9 mm 10 mm
Installation/ mounting/ dimensions  mounting position  fastening method  height  width  depth  required spacing  • for grounded parts  — forwards  — backwards  — upwards  — at the side  — downwards  • for live parts  — forwards  — backwards  — backwards	vertical for snapping onto 60 mm busbar systems 260 mm 90 mm 155 mm  10 mm 0 mm 30 mm 9 mm 10 mm 10 mm
Installation/ mounting/ dimensions  mounting position  fastening method  height  width  depth  required spacing  • for grounded parts  — forwards  — backwards  — upwards  — at the side  — downwards  • for live parts  — forwards  — backwards  — upwards  • upwards	vertical for snapping onto 60 mm busbar systems 260 mm 90 mm 155 mm  10 mm 0 mm 30 mm 9 mm 10 mm 10 mm
Installation/ mounting/ dimensions  mounting position  fastening method  height  width  depth  required spacing  • for grounded parts  — forwards  — backwards  — upwards  — at the side  — downwards  • for live parts  — forwards  — backwards  — upwards  - downwards  • downwards  — downwards  — backwards  — backwards  — backwards  — upwards  — downwards	vertical for snapping onto 60 mm busbar systems 260 mm 90 mm 155 mm  10 mm 0 mm 30 mm 9 mm 10 mm 10 mm
Installation/ mounting/ dimensions  mounting position  fastening method  height  width  depth  required spacing  • for grounded parts  — forwards  — backwards  — upwards  — at the side  — downwards  • for live parts  — backwards  — backwards  — upwards  — at the side  — downwards  • for live parts  — forwards  — backwards  — backwards  — upwards  — at the side	vertical for snapping onto 60 mm busbar systems 260 mm 90 mm 155 mm  10 mm 0 mm 30 mm 9 mm 10 mm 10 mm
Installation/ mounting/ dimensions  mounting position  fastening method  height  width  depth  required spacing  • for grounded parts  — forwards  — backwards  — upwards  — at the side  — downwards  • for live parts  — forwards  — backwards  — upwards  • at the side  — downwards  — torwards  — backwards  — backwards  — at the side  — downwards  — at the side  Connections/ Terminals	vertical for snapping onto 60 mm busbar systems 260 mm 90 mm 155 mm  10 mm 0 mm 30 mm 9 mm 10 mm 10 mm 10 mm 9 mm 10 mm 9 mm 10 mm 9 mm 9 mm 10 mm
Installation/ mounting/ dimensions  mounting position  fastening method  height  width  depth  required spacing  • for grounded parts  — forwards  — backwards  — upwards  — at the side  — downwards  • for live parts  — forwards  — backwards  — at the side  — downwards  • at the side  — downwards  — torwards  — backwards  — at the side  — downwards  — at the side  Connections/ Terminals  type of electrical connection for main current circuit	vertical for snapping onto 60 mm busbar systems 260 mm 90 mm 155 mm  10 mm 0 mm 30 mm 9 mm 10 mm 10 mm 10 mm 10 mm 9 mm 10 mm screw-type terminals
Installation/ mounting/ dimensions  mounting position  fastening method  height  width  depth  required spacing  • for grounded parts  — forwards  — backwards  — upwards  — at the side  — downwards  • for live parts  — forwards  — backwards  — upwards  — at the side  — downwards  • for live parts  — forwards  — backwards  — upwards  — backwards  — upwards  — oonnections/ Terminals  type of electrical connection for main current circuit  type of connectable conductor cross-sections for main contacts stranded	vertical for snapping onto 60 mm busbar systems 260 mm 90 mm 155 mm  10 mm 0 mm 30 mm 9 mm 10 mm 10 mm 0 mm sorew-type terminals 1 10 mm², 2x (2.5 6 mm²)
Installation/ mounting/ dimensions  mounting position  fastening method  height  width  depth  required spacing  • for grounded parts  — forwards  — backwards  — upwards  — at the side  — downwards  • for live parts  — forwards  — backwards  — upwards  — at the side  Connections/ Terminals  type of electrical connection for main current circuit  type of connectable conductor cross-sections for main contacts stranded  connectable conductor cross-section for main contacts finely stranded with core end processing	vertical for snapping onto 60 mm busbar systems 260 mm 90 mm 155 mm  10 mm 0 mm 30 mm 9 mm 10 mm 10 mm 10 mm 10 mm 9 mm 10 mm screw-type terminals
Installation/ mounting/ dimensions  mounting position  fastening method  height  width  depth  required spacing  • for grounded parts  — forwards  — backwards  — upwards  — at the side  — downwards  • for live parts  — forwards  — upwards  — a the side  — downwards  — to ackwards  — upwards  — to rowards  — to ackwards  — upwards  — at the side  Connections/ Terminals  type of electrical connection for main current circuit  type of connectable conductor cross-sections for main contacts stranded  connectable conductor cross-section for main contacts finely stranded with core end processing  Safety related data	vertical for snapping onto 60 mm busbar systems 260 mm 90 mm 155 mm  10 mm 0 mm 30 mm 9 mm 10 mm 10 mm 0 mm son mm 10 mm
Installation/ mounting/ dimensions  mounting position  fastening method height width depth  required spacing  • for grounded parts — forwards — backwards — upwards — at the side — downwards  • for live parts — forwards — backwards — upwards — backwards — upwards — to ownwards — backwards — upwards — backwards — upwards — the side  Connections/ Terminals  type of electrical connection for main current circuit type of connectable conductor cross-sections for main contacts stranded  connectable conductor cross-section for main contacts finely stranded with core end processing  Safety related data  B10 value with high demand rate according to SN 31920	vertical for snapping onto 60 mm busbar systems 260 mm 90 mm 155 mm  10 mm 0 mm 30 mm 9 mm 10 mm 10 mm 0 mm 30 mm 10 mm 10 mm 30 mm 11 mm 12 mm 13 mm 14 mm 15 mm 15 mm 16 mm 17 mm 18 mm 19 mm
Installation/ mounting/ dimensions  mounting position  fastening method  height  width  depth  required spacing  • for grounded parts  — forwards  — backwards  — upwards  — at the side  — downwards  • for live parts  — forwards  — upwards  — a the side  — downwards  — to ackwards  — upwards  — to rowards  — to ackwards  — upwards  — at the side  Connections/ Terminals  type of electrical connection for main current circuit  type of connectable conductor cross-sections for main contacts stranded  connectable conductor cross-section for main contacts finely stranded with core end processing  Safety related data	vertical for snapping onto 60 mm busbar systems 260 mm 90 mm 155 mm  10 mm 0 mm 30 mm 9 mm 10 mm 10 mm 0 mm son mm 10 mm

Certificates/ approvals

**General Product Approval** 

For use in hazardous locations

**Declaration of Conformity** 

other

Confirmation









Confirmation

## Further information

Siemens has decided to exit the Russian market (see here).

https://press.siemens.com/global/en/pressrelease/siemens-wind-down-russian-business

Siemens is working on the renewal of the current EAC certificates.

Please contact your local Siemens office on the status of validity of the EAC certification if you intend to import or offer to supply these products to an EAC relevant market (other than the sanctioned EAEU member states Russia or Belarus).

Information on the packaging

https://support.industry.siemens.com/cs/ww/en/view/109813875

Information- and Downloadcenter (Catalogs, Brochures,...)

https://www.siemens.com/ic10

Industry Mall (Online ordering system)

https://mall.industry.siemens.com/mall/en/en/Catalog/product?mlfb=3RA2220-1ED23-0AP6

Cax online generator

http://support.automation.siemens.com/WW/CAXorder/default.aspx?lang=en&mlfb=3RA2220-1ED23-0AP6

Service&Support (Manuals, Certificates, Characteristics, FAQs,...)

https://support.industry.siemens.com/cs/ww/en/ps/3RA2220-1ED23-0AP6

Image database (product images, 2D dimension drawings, 3D models, device circuit diagrams, EPLAN macros, ...)


http://www.automation.siemens.com/bilddb/cax\_de.aspx?mlfb=3RA2220-1ED23-0AP6&lang=en


Characteristic: Tripping characteristics, I2t, Let-through current


https://support.industry.siemens.com/cs/ww/en/ps/3RA2220-1ED23-0AP6/char


Further characteristics (e.g. electrical endurance, switching frequency)

http://www.automation.siemens.com/bilddb/index.aspx?view=Search&mlfb=3RA2220-1ED23-0AP6&objecttype=14&gridview=view1

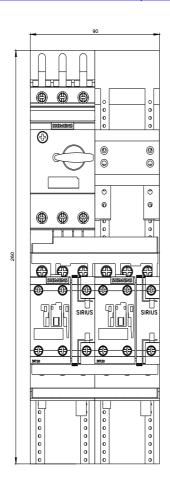

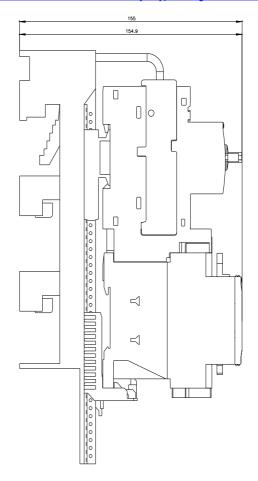

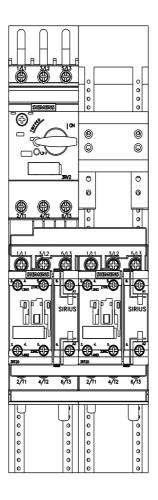

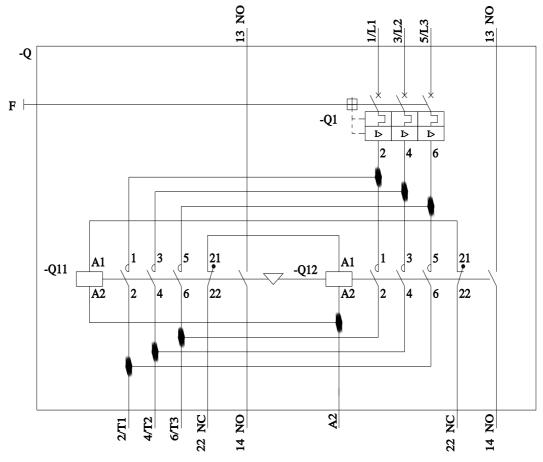

last modified: 12/15/2020 🖸